

Pharma-Choice™

by: Acute Care Pharmaceuticals

Pharma-Surface Guard™

PSG797



Cleans all stainless steel surfaces!

Product Highlights

- Made with lint-less ISO Class 5 cleanroom grade wipers
- Large 6" x 9" wiper
- Doesn't cause oxidation
- Prevents pitting on work surfaces

Product Applications

- Chemo spill cleanup
- Stainless steel cleaner
- Two-step process

**Only product on the market that is
USP <797> Compliant!**

Sizes: 6" x 9" Saturated Wiper
Wiper #1 Composition: Polyester
Wiper #2 Composition: 45% Polyester / 55% Cellulose
ISO Class: ISO Class 5 and higher

Package Configuration: 15 Dual packets per box


Two-Step Process

Packet #1

(2% sodium hypochlorite)
Cleans up the spill using a hypochlorite soap solution.

Packet #2

(1% sodium thiosulfate & 0.9% benzyl alcohol)
Inactivates the cleaning solution from wiper #1, eliminating the chance of pitting on stainless steel surfaces.

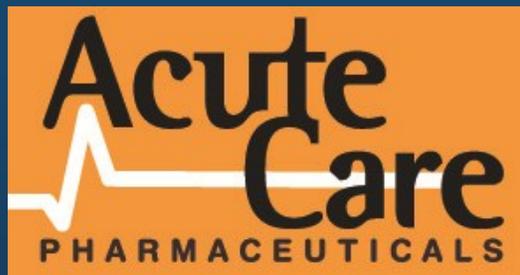

To Order Direct

Phone: 888.909.7700

Fax: 858.675.9380

E-mail: 797@acutecareonline.com

www.Pharma-Choice.com